

250A PANELBOARD

	DIMENSIONS			Modules
	H	W	D	
6 Way	912	630	164	12
8 Way	988	630	164	13
12 Way	1140	630	164	15
16 Way	1292	630	164	17

250A CABLE WAYS

6 Way	912	250	180	12
8 Way	988	250	180	13
12 Way	1140	250	180	15
16 Way	1292	250	180	17


400A PANELBOARD

	DIMENSIONS			Modules
	H	W	D	
6 Way	1064	630	164	14
8 Way	1140	630	164	15
12 Way	1292	630	164	17
16 Way	1444	630	164	19

400A CABLE WAYS

6 Way	1064	250	180	14
8 Way	1140	250	180	15
12 Way	1292	250	180	17
16 Way	1444	250	180	19

MAIN UNITS

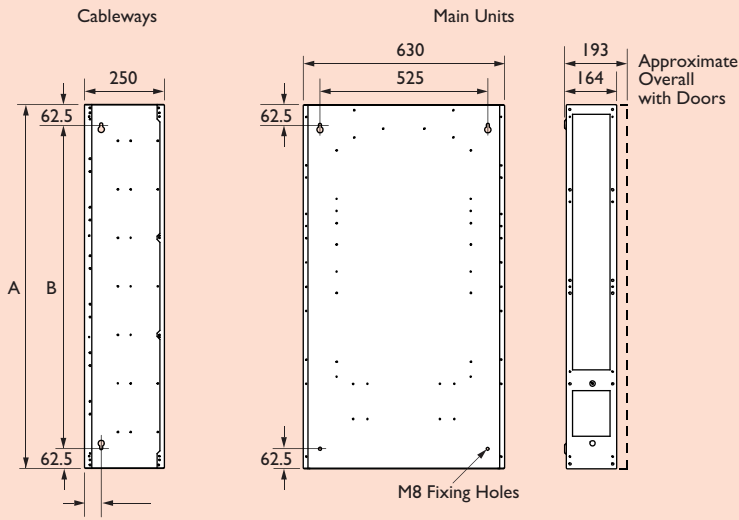


MAIN UNITS 250A

	DIMENSIONS	
	A	B
6 Way	912	787
8 Way	988	863
12 Way	1140	1015
16 Way	1292	1167

MAIN UNITS 400A


6 Way	1064	939
8 Way	1140	1015
12 Way	1292	1167
16 Way	1444	1319

ADD-ON UNITS

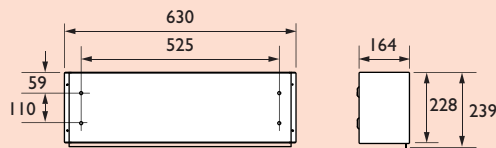


AVAILABLE SPREADING ROOM FOR INCOMING CABLES

NH125-250A Incomer

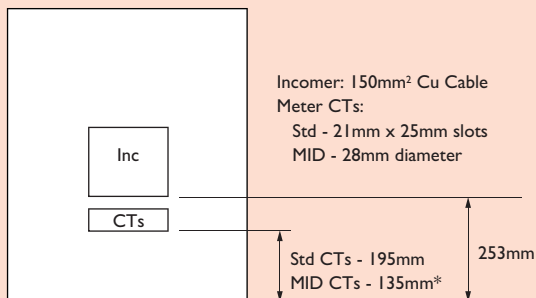

NH125-400A Incomer

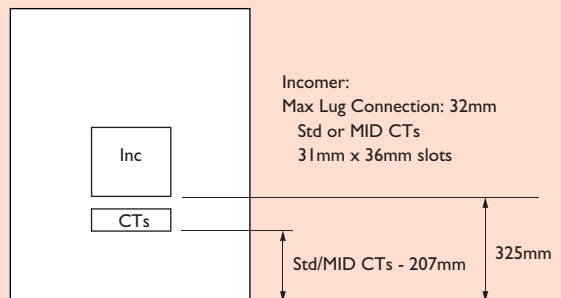

* We would recommend the use of a cable spreader box for incoming 4c copper cables in excess of 70mm² when used in conjunction with the 250A integral MID meter option